

APPENDIX F:

Field Verification of Zonally Controlled Systems

Introduction and Scope

Zonally controlled systems are usually installed primarily for improved comfort, not improved energy consumption. Studies have shown that zonally controlled cooling systems that utilize bypass ducts or that substantially reduce the airflow across the coil when zone dampers close can actually use more energy. Because of this, ECC-Raters are required to evaluate these systems to ensure that it is consistent with what was modeled and what appears on the CF1R.

One type of zonally controlled forced air system uses motorized zone dampers in the supply ducts to send supply air from a single air handler to different zones, as needed, rather than sending air to the entire area served by that system. These require multiple thermostats or temperature sensors in each of the zones. The number of zones can be two or more. Two-zone systems are by far the most common. The most common application of this type of system is in two-story homes served by a single forced-air system. The tendency for air to stratify, along with substandard duct design, causes comfort issues that can often be overcome by zonal control.

Dampers may also be installed on the return ducts but are not required for the system to be considered a zonally controlled system.

Problems with this type of zonally controlled system arise from the excess air pressure that occurs at the air handler fan when one or more of the zone dampers close and restrict airflow to just a portion of the supply duct system. One strategy is to simply let the pressure increase, which substantially reduces airflow across the cooling coil or heat exchanger. Another is to install a bypass duct that allows the excess air to “short circuit” from the supply side back to the return side. This causes problems by sending excessively hot air (heating mode) or excessively cold air (cooling mode) back into the system.

An alternative approach is to send the “excess air” back into conditioned space rather than directly back into the return air. These are not considered bypass ducts if the air has a chance to mix with house air in a way that does not substantially change the return air temperatures. The area in the home where the excess air is sent to is referred to as a “dump zone.” These dump zones will generally be overconditioned by this excess air and are usually unoccupied portions of the home, such as hallways or vaulted ceiling areas above the occupied zones. This design may lose some of the comfort benefits of a zonally controlled system.

Zonal control can be also achieved by using two separate systems, sized appropriately for each zone. These act independently and do not need zone dampers. These also do not require bypass dampers or other strategies to handle the excess air. For example, zonal control can be achieved in a two story home by installing a single system with zone dampers that separately control air to the upstairs and downstairs; or it can be achieved by installing two small systems, one dedicated to the first floor and one to the second floor. Assuming that the house can be adequately served by a single large system, the first approach generally costs less.

If it is discovered that a zonally controlled forced air system is installed but not claimed for credit, it needs to be reported to the ECC-Provider (registry). Zonally controlled systems need to be correctly modeled in compliance software then installed. The CF1R must be revised to reflect the installed system.

Summary of Requirements

Mandatory compliance approach –

- Zonally controlled systems are not required, but if installed must meet mandatory airflow and fan efficacy requirements using slightly different test methods than for single-speed and variable-speed compressors.

Prescriptive compliance approach –

- Bypass ducts/dampers are not allowed.

Performance compliance approach –

- Zonally controlled systems must be modeled then installed.
- Bypass dampers are allowed only if modeled and indicated on the CF1R.
- Dual-speed/multispeed condensers may also qualify for a credit and, if modeled, must be installed.

When a feature is “modeled” using the performance compliance approach it will appear on the certificate of compliance.

Identifying Zonally Controlled Systems in the Field

The following are characteristics of most zonally controlled systems that use dampers. Not all of these items need to be apparent for the system to be considered zonally controlled. Final determination may require consulting with the installer, designer, and system manufacturer.

Motorized or actuated zone dampers on the supply ducts. These can be one or more large dampers in or near the supply plenum or they can be one damper for each supply outlet (register). See Figure C-1: Illustration of a Two-Zone, Two-Damper Duct System With Both Zones Open to Supply Conditioned Air through Figure C- 5: Illustration Of A System With A Bypass Duct And Barometric-Type Bypass Damper.


Multiple thermostats or temperature sensors in area served by a single system. The most common two-zone systems use ordinary thermostats for each zone. Some systems have a single master thermostat with small temperature sensors in each zone.

A control board on or near the air handler with low-voltage wires going to the thermostats/temperature sensors and to each damper. Low-voltage wires will also connect the control board and the main air handler control board. See photos below.

Bypass duct and damper. This will be a duct connecting the supply end directly to the return end. On the supply side it will connect after the coil and before the zone damper(s), usually off of the supply plenum. On the return side, it can either connect directly to the side of the return end of the furnace, near the return end of the furnace in a return plenum, or as far


away as a return grill boot. An automatic damper will control airflow through this duct. When all zones are calling for cooling (all zone dampers open), the bypass damper should be fully closed. When one or more zone dampers close, the damper should open partially or fully as needed to reduce the supply plenum pressure. This is commonly achieved by a barometric bypass damper. Barometric dampers are held closed by an adjustable weight. When enough pressure builds up on one side of the damper, it overpowers the weight and opens the damper. See Figure C-5: Illustration of a System With a Bypass Duct and Barometric-Type Bypass Damper. Another strategy is to use a motorized damper.

Figure C-1: Illustration of a Two-Zone, Two-Damper Duct System With Both Zones Open to Supply Conditioned Air

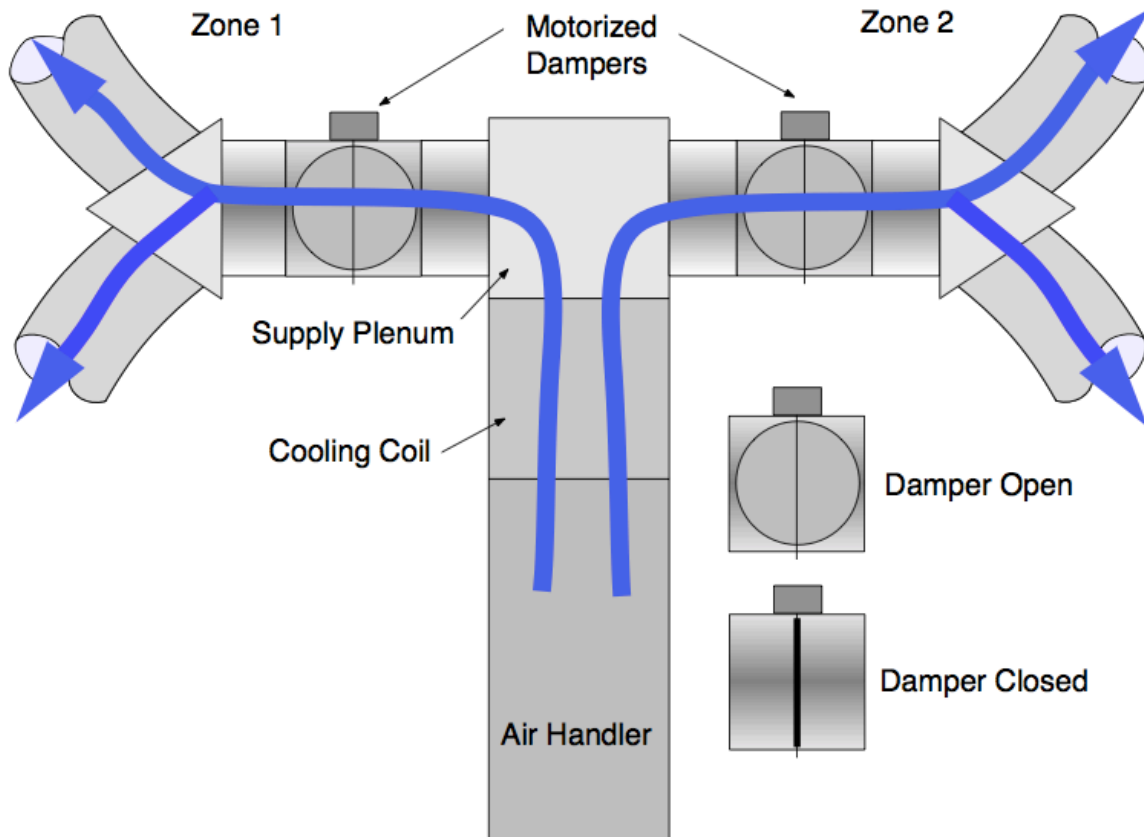


Credit: Russ King, P.E.

Figure C-2: Illustration of a Two-Zone, Two-Damper Duct System With Zone 2 Open to Supply Conditioned Air. The Zone 1 Damper Is Closed

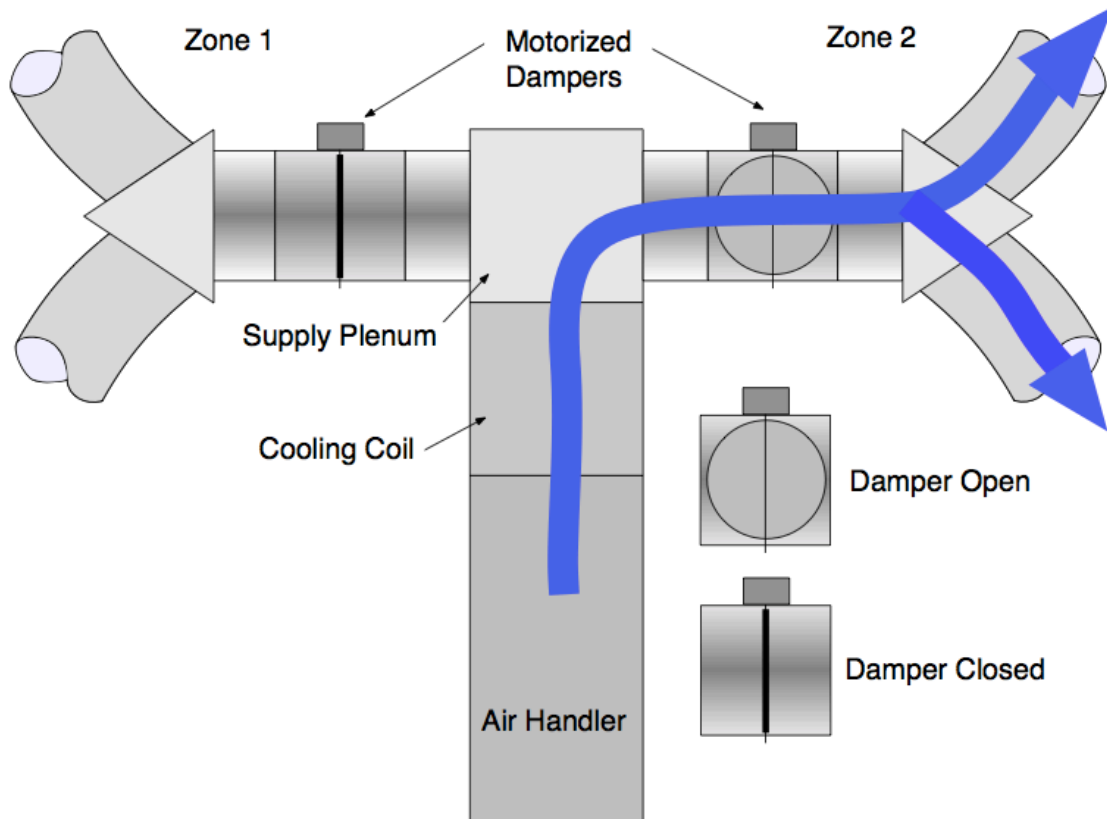


Credit: Russ King, P.E.

Figure C-3: Illustration of a Two-Zone, Single-Damper Duct System With Both Zones Open to Supply Conditioned Air

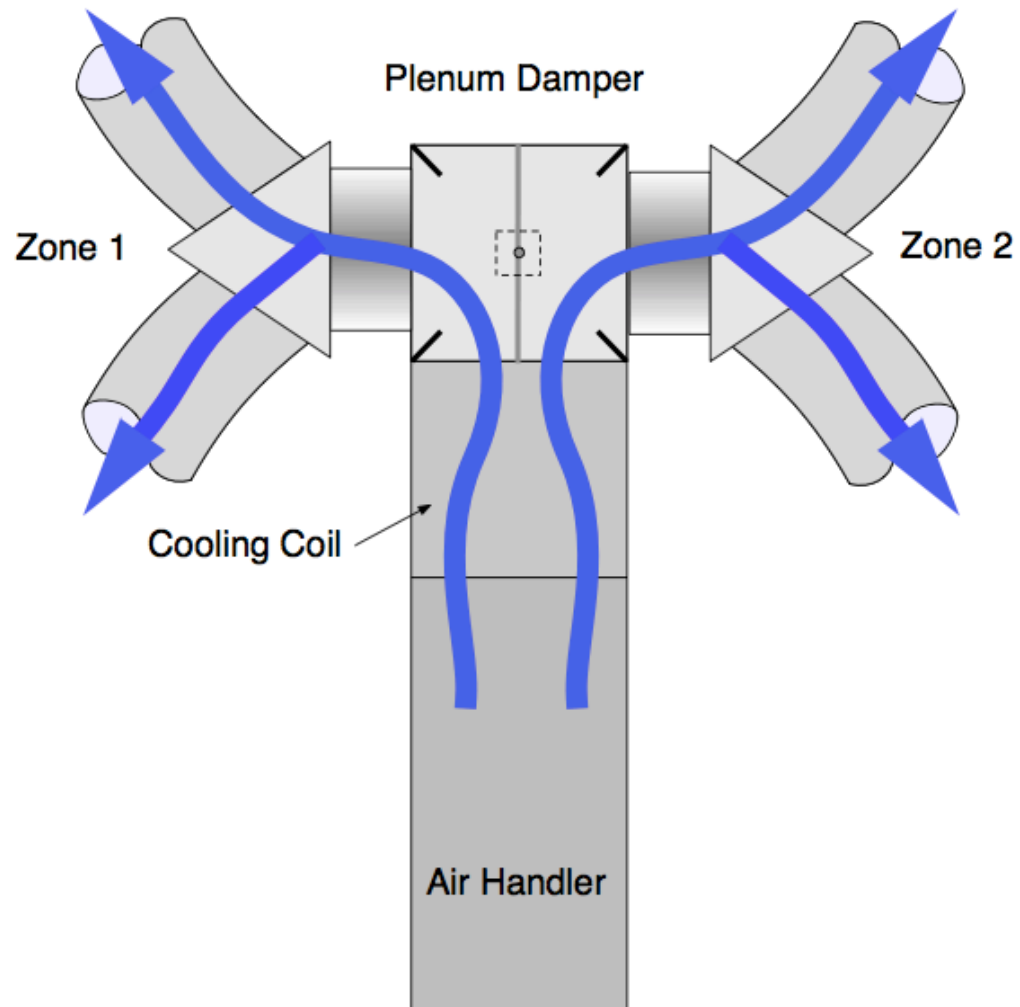


Credit: Russ King, P.E.

Figure C-4: Illustration of a Two-Zone, Single-Damper Duct System With the Damper Positioned to Supply Conditioned Air to Zone 1

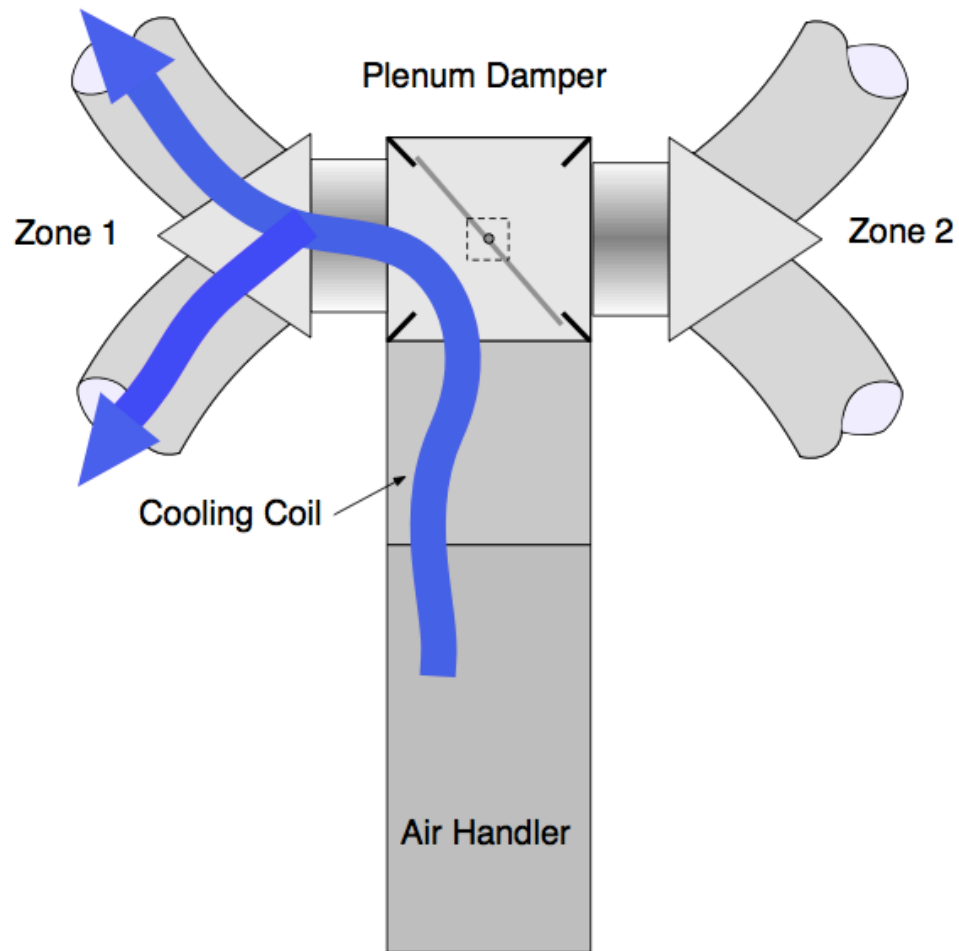

Credit: Russ King, P.E.

Figure C-5: Illustration of a System With a Bypass Duct and Barometric-Type Bypass Damper

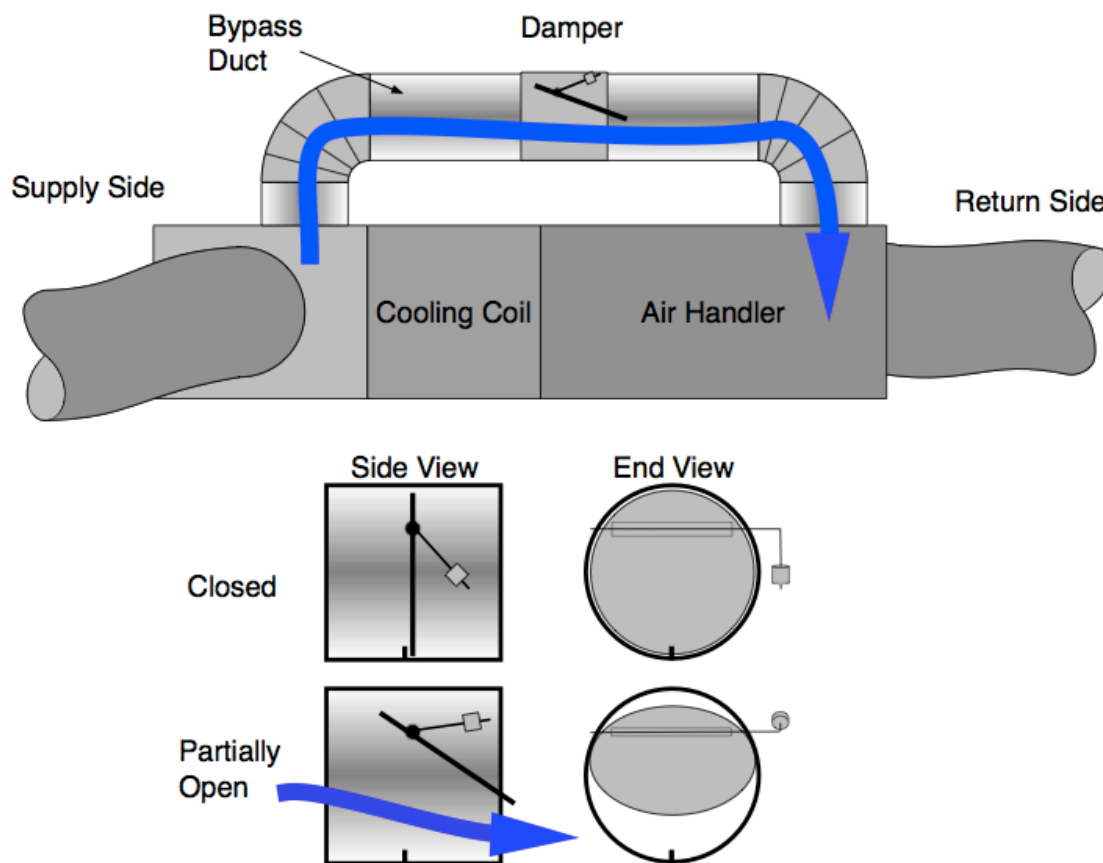

Credit: Russ King, P.E.


These photos show two examples of zonal control control-boards:

Figure C-6: Photo of a Duct-Mounted Control Board



Credit: Russ King, P.E.

Figure C-7: Photo of a Cabinet-Mounted Control Board

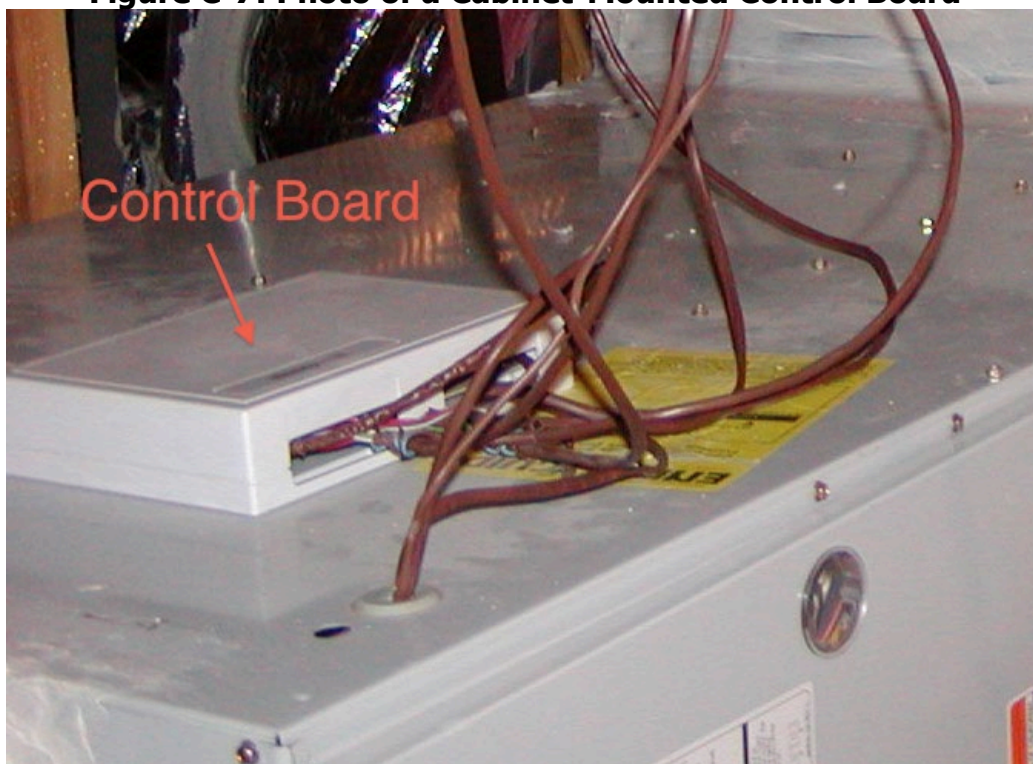

Credit: Russ King, P.E.

Identifying Multispeed/Variable-Speed Condensers

Most condensers operate at a single speed and capacity and either run for longer or shorter periods during hotter or cooler weather, respectively. Short run times (aka, short cycling) reduce efficiency. Multispeed condensers typically have a high and low speed. This can be accomplished by two separate compressors inside a single condenser, or by a single dual-stage compressor. During cooler weather (aka, part load times) the condenser will run in low speed for longer run periods. When needed, the condenser can run in high speed.

Variable-speed condensers are not limited to just high and low speeds. They can gradually ramp from lowest to highest speeds as needed.

There are several features that can indicate that a condenser is multispeed. These include:

- Product tags, labels and marketing names that indicate two-stage, dual-stage, multistage, etc.
- Two compressors observed by looking down through the condenser fan.
- High and low capacities or nominal tonnages indicated on nameplate.

The definitive way to determine if the condenser is multispeed or variable-speed is to record the make and model number and find the manufacturer's specifications.

REFERENCES

JA1: Glossary

ZONAL CONTROL is the practice of dividing a residence into separately controlled HVAC zones. This may be done by installing multiple HVAC systems that condition a specific part of the building, or by installing one HVAC system with a specially designed distribution system that permits zonal control. The Energy Commission has approved an alternative calculation method for analyzing the energy impact of zonally controlled space-heating and -cooling systems. To qualify for compliance credit for zonal control, specific eligibility criteria specified in the Residential ACM Manual must be met.

§150.0(m)13C. **Zonally Controlled Central Forced Air Systems.** Zonally controlled central forced air cooling systems shall be capable of simultaneously delivering, in every zonal control mode, an airflow from the dwelling, through the air handler fan and delivered to the dwelling, of greater than 350 CFM per ton of nominal cooling capacity, and operating a gas furnace air-handling unit fan efficacy of less than or equal to 0.45 W/cfm or an air-handling unit that is not a gas furnace fan efficacy of less than or equal to 0.58 W/CFM as confirmed by field verification and diagnostic testing in accordance with the procedures specified in Reference Residential Appendix RA3.3.

EXCEPTION 1 to 150.0(m)13C: Multispeed compressor systems or variable speed compressor systems shall demonstrate compliance for airflow (cfm/ton) and fan efficacy (watt/cfm) by operating the system at maximum compressor capacity and maximum system fan speed and with all zones calling for conditioning.

EXCEPTION 2 TO 150.0(M)13C: Gas furnace air-handling units manufactured before July 3, 2019, shall with a fan efficacy value less than or equal to 0.58 W/cfm.

§150.1(c)13. **HVAC System Bypass Ducts.** Unless otherwise specified on the Certificate of Compliance, bypass ducts that deliver conditioned supply air directly to the space conditioning system return duct airflow shall not be used. All zonally controlled forced air systems shall be verified by a ECC-Rater utilizing the procedure in Reference Residential Appendix Section RA3.1.4.6 to confirm compliance with 150.1(c)13.

RA 3.1.4.6 Verification of Prescriptive Bypass Duct Requirements for Zonally Controlled Forced Air Systems

When a zonally controlled forced air system is installed, one the following shall be verified to determine compliance as required by Energy Standards §150.1(c)13:

- A visual inspection shall confirm that bypass ducts that deliver conditioned supply air directly to the space conditioning system return duct airflow are not used.
- If the certificate of compliance indicates an allowance for use of a bypass duct, the bypass duct shall conform to the specifications given on the certificate of compliance.

If the zonally controlled system meets one of these criteria, the system complies. Otherwise, the system does not comply.